



Instructions for Cleaning and Maintenance PaperStone-Surfaces


Dear Customer,

for optimal results, please refer to the following cleaning and maintenance instructions:

General advice

- Use **NATURHAUS-Refresher Spray** for Cleaning and Maintenance of all PaperStone and other furniture surfaces except glass and mirrors
- Only use Tork Cleaning Cloths for cleaning and maintenance of PaperStone. Do not use Microfibre products
- For safety and disposal instructions, please refer to the product label.
- Shake **NATURHAUS-Refresher Spray** well before use.

A. NATURHAUS-Refresher Spray and Tork Cleaning Cloths.

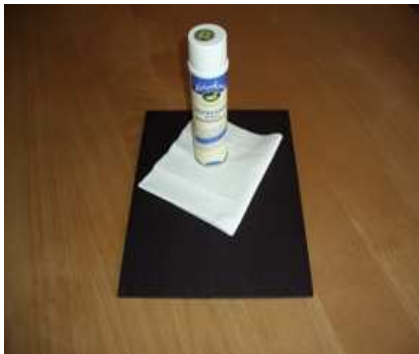

B. Apply 2-3 puffs of **NATURHAUS-Refresher Spray** on the Tork Cleaning Cloth



C. Evenly disperse the product on the surface..



D. Gently buff until surface feels almost dry



Additional advice:

- In general, cleaning of the counters is only necessary once a day.
- After use, please turn refresher can around and spray for 2 seconds.
- Tork Cleaning Cloths can be used more than once during the day. Used cloths can be disposed of with normal waste.

The information herein is given in good faith and to the best of our knowledge. No warranty, express or implied, is made. (Version 001 / Sep 2010)